COOKTOP PARTS

For Models: RCS3004RS00
(Stainless Steel)

30" ELECTRIC
BUILT−IN
COOKTOP

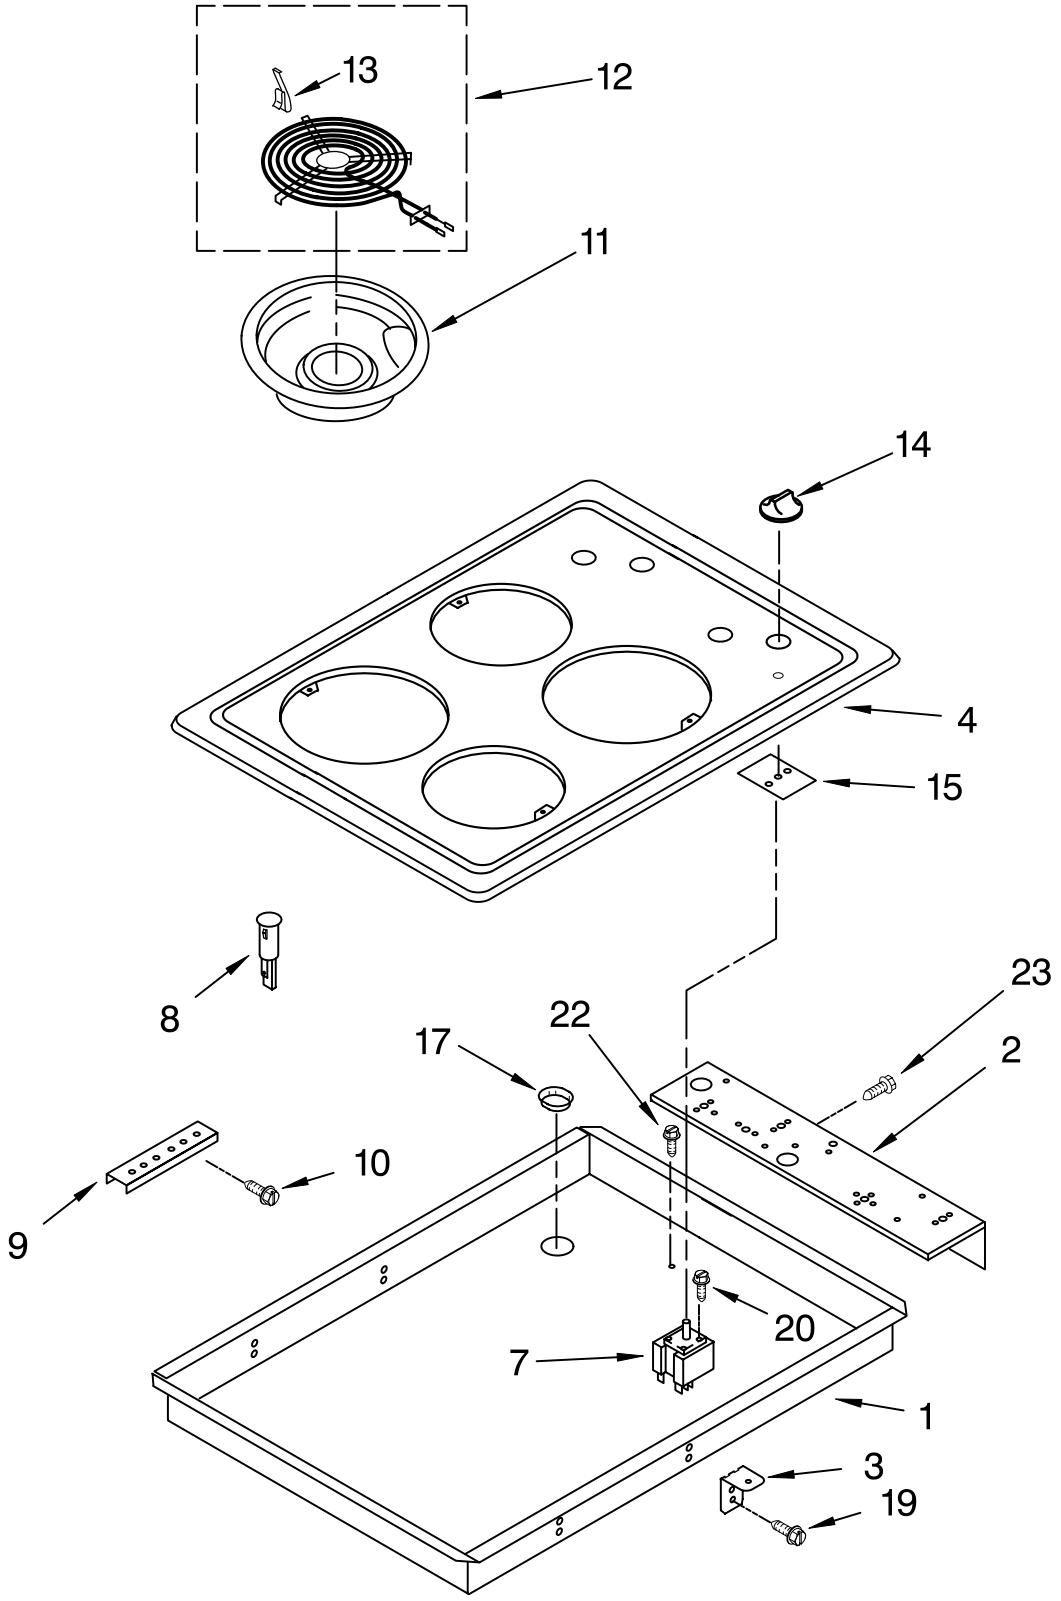

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP PARTS

For Models: RCS3004RS00
(Stainless Steel)

Illus. No.	Part No.	DESCRIPTION
1	8286373	Burner Box
2	8286372	Bracket, Switch Mounting
3	3192454	Bracket, Mounting
4		Cooktop
	8286390LM	Stainless Steel
7		Switch, Infinite
	3191472	Use W/8" Element (Silver Shaft)
	3191471	Use W/6" Element (Blue Shaft)
8	4456181	Light, Indicator
9	4455917	Bracket, Mounting
10	3400093	Screw
11		Pan, Surface
	3195208	6" Pan (2)
	3195209	8" Pan (2)
12		Unit, Surface
	8053265	6" (2)
	8053267	8" (2)
13	3195917	Clip, Element
14	8286043BL	Knob, Control (4)
15	3183956	Seal, Switch
17	3191506	Bushing, Conduit
19	3196537	Screw, 8−18 x 3/8
20	3400855	Screw, 8−32 x 1/4
22	3400015	Screw, 10−32 x 3/8
23	3177991	Screw, 8−18 x 1/4

FOLLOWING PARTS NOT ILLUSTRATED

LITERATURE PARTS

8286310	Installation Instructions
8286311	Use & Care Guide
3192107	Wiring Diagram
3191638	Safer Cooking Tips

WIRING HARNESS PARTS

8286368	Harness, Wire (Main)
4455805	Grommet
8286375	Conduit Assembly
3196160	Screw, 8−18 x 1/4
4455592	Harness, Wire (Light)